Acer

G70
GSM 900

G75
GSM 900

User's Manual

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Copyright

Copyright © 1999 by Acer Peripherals, Incorporated. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Acer Peripherals, Incorporated.

Disclaimer

Acer Peripherals, Incorporated makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, Acer Peripherals, Incorporated reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of Acer Peripherals, Incorporated to notify any person of such revision or changes.

Downloaded from www.Manualslib.com manuals search engine

< Memo>

Downloaded from www.Manualslib.com manuals search engine

Quick Start

Simply follow the steps below to make your first call:

❶ Install the SIM card.

What is a SIM card?

You need a SIM (Subscriber Identification Memory) card to access your mobile phone and network. Two types of SIM card are on the market. For this mobile phone, you need a small size card. This card contains all the important information of your phone account such as network accesses, PIN (Personal Identification Number), phone books, messages and services. Please handle it with special care. If you lose it, please contact your dealer or service provider as soon as possible.

Turn back the phone and locate the SIM card socket. Follow the steps below to install the SIM card.

	The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card when you handle and install.

1

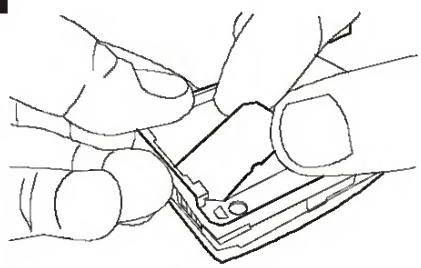

Insert the bevelled end of the SIM card into the SIM card socket. Make sure the metal contact faces down when you insert.

2

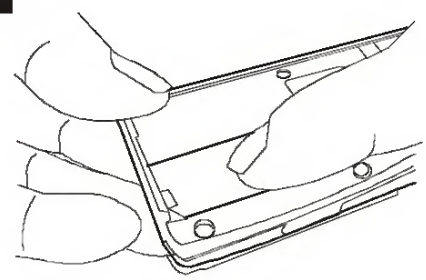

Push the SIM card completely into the hollow.

3

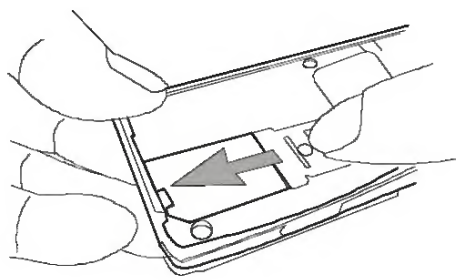

Slide the metal SIM card stopper as shown to fix the SIM card.

Downloaded from www.Manualslib.com manuals search engine

❷ Install the battery.

1	2
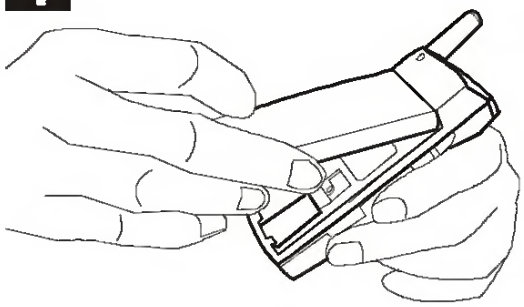	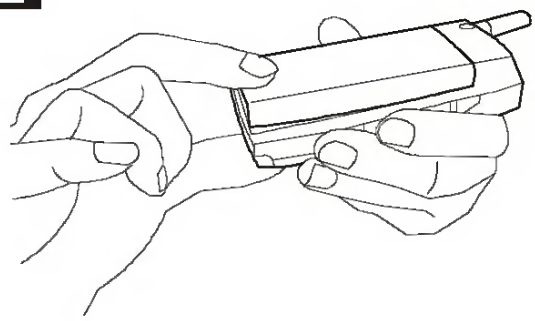
Place the top end of the battery on the handset.	Hold down the bottom side of the battery. You will hear a click when the battery is secured.

Charge the battery.

1	2
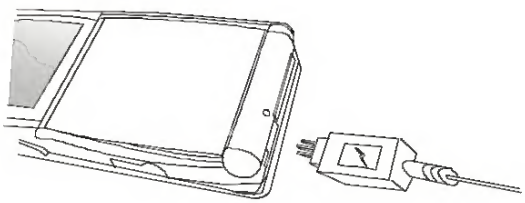	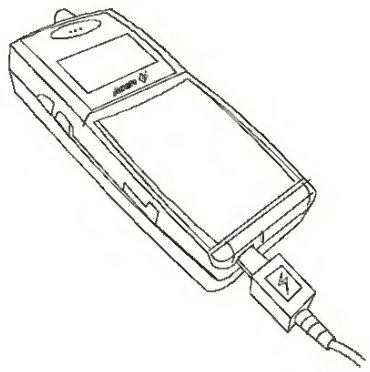
Insert the travel charger connector into the battery charging socket at the bottom of the handset. Make sure the flash mark on the connector faces upward when you insert.	

It takes about 210 minutes for the travel charger to fully charge the new battery.

On the LCD display, the battery strength bars will flash until the battery is full. When you start charging the battery in standby mode, the battery strength bars will start to flash a few seconds after you plug in the phone, indicating that the battery charging has started.

Please make sure that the flash mark faces upward when you insert the connector into the battery charging socket. When you detach the cable from the phone, move the connector upward or downward and then pull the connector out of the socket.

Downloaded from www.Manualslib.com manuals search engine

After the battery is fully charged, detach the connector from the handset and press ⏻ (or ⏻) key for a few seconds to turn on the handset power.

You can still use the handset when charging. However, this will increase the charging time.

Enter your PIN, then press ● (or ●) key.

What is PIN?

PIN (Personal Identification Number) is a password provided by your network service provider. With this PIN, you can use the SIM card and access the services from the network service provider.

You can enter your PIN with the alphanumeric keys. If you have typed a letter wrong, please press ↙ (or ∨ ∧) key.

When entering wrong PIN for over three times, your phone will be locked up. Please contact your dealer to solve this problem.

After your PIN is accepted, the phone starts searching for the designated network automatically. This may take a few seconds.
When done, you can start to dial the number (including area code) using the digit keys, then press ● (or ●) key to send the dial.

When you finish your telephone call, press ⏻ (or ⏻) key to end the call and return to standby mode.

Downloaded from www.Manualslib.com manuals search engine

< Memo>

Downloaded from www.Manualslib.com manuals search engine

Table of Contents

QUICK START I

SAFETY INFORMATION 1

YOUR HANDSET 2

CHAPTER 1. BASIC OPERATION 9

1.1 TURN ON THE PHONE POWER 9
1.2 TURN OFF THE PHONE POWER 9
1.3 MAKE A CALL 9
1.4 END A CALL 9
1.5 ANSWER A CALL 10
1.6 ADJUST THE EARPIECE VOLUME 10

CHAPTER 2. BASIC CALL FUNCTIONS 11

2.1 ONE-TOUCH DIALING 11
2.2 MAKE AN INTERNATIONAL CALL 11
2.3 MAKE AN EMERGENCY CALL 11
2.4 MAKE A VOICE MAIL CALL 11
2.5 MISSED CALL MESSAGE 12
2.6 ABBREVIATED CALL 12
2.7 PHONE BOOK SHORTCUT 12
2.8 ADD NEW ENTRIES 12
2.9 LAST 10 NUMBER REDIAL 12
2.10 INCOMING CALL WAITING 13
2.11 EXTENSION DIAL 13
2.12 CALL OPTIONS 13

Mute call *13*
* *End call* *13*
* *Swap call* *14*
* *Hold call* *14*
* *Unhold call* *14*
* *Join call* *14*
* *Private call* *14*
* *Messages* *14*

2.13 KEY LOCK 14

Downloaded from www.Manualslib.com manuals search engine

CHAPTER 3. MENU OPTIONS 15

3.1 PHONE BOOK (1) 17

Last Number (1-1) *17*
Last Dialed (1-1-1) 17
Last Received (1-1-2) 17
Last Missed (1-1-3) 17
Delete all (1-1-4) 18
Last Dialed (1-1-4-1) 18
Last Received (1-1-4-2) 18
Last Missed (1-1-4-3) 18
All (1-1-4-4) 18
Find Record (1-2) *19*
By Name (1-2-1) 19
Add Record (1-3) *19*
Delete Record (1-4) *19*
Delete By Name (1-4-1) 20
Delete All (1-4-2) 20
Memory Selection (1-5) *20*
Own Number (1-6) *20*

3.2 MESSAGES (2) 21

Inbox (2-1) *21*
Delete Message 21
Edit Message 21
Reply Message 21
Send Message 22
Use Number 22
Write Message (2-2) *22*
Outbox (2-3) *23*
Delete Message 23
Edit Message 23
Send Message 23
Use Number 23
Listen Message (2-4) *24*
Cell Broadcast (2-5) *24*
Receive Broadcast (2-5-1) 24
Topics (2-5-2) 24
Language (2-5-3) 24
Message Settings (2-6) *25*
Message Center (2-6-1) 25
Valid Period (2-6-2) 25

Downloaded from www.Manualslib.com manuals search engine

Voice Mail Box (2-6-3) 25
Reply Path (2-6-4) 25
Delivery Report (2-6-5) 26
Alert Beep (2-6-6) 26
Message Format (2-6-7) 26
Delete All (2-7) *26*

3.3 CALL SERVICES (3) 27

Call Divert (3-1) *27*
No Condition (3-1-1) 27
If Busy (3-1-2) 27
If No Reply (3-1-3) 28
If Unreachable (3-1-4) 28
Cancel All (3-1-5) 28
Call Barring (3-2) *29*
Bar All Out (3-2-1) 29
Bar Int'l Out (3-2-2) 29
Bar IntExtH Out (3-2-3) 29
Bar All In (3-2-4) 30
Bar Roaming In (3-2-5) 30
Cancel All (3-2-6) 30
Call Waiting (3-3) *31*
Activate (3-3-1) 31
Cancel (3-3-2) 31
Status (3-3-3) 31
Call Information (3-4) *31*
Last Call (3-4-1) 31
Call Duration (3-4-1-1) 31
Call Cost (3-4-1-2) 31
All Calls (3-4-2) 31
Call Duration (3-4-1-1) 31
Call Cost (3-4-1-2) 32
Clear Cost (3-4-2-3) 32
Clear Durations (3-4-2-4) 32
Call Rate (3-4-3) 32
Currency (3-4-3-1) 32
Charge Unit (3-4-3-2) 32
Cost Limit (ON/OFF) (3-4-4) 32
Line in Use (3-5) *33*
Next Call (3-6) *33*
Voice 33
Data 33
Fax 33

Downloaded from www.Manualslib.com manuals search engine

3.4 HANDSET SETTINGS (4) 34

Back Light (4-1) *34*
Auto Redial (4-2) *34*
Answer by (4-3) *34*
Key Lock (4-4) *35*
Language (4-5) *35*
Time Alert (4-6) *35*
Restore (4-7) *35*

3.5 NETWORK SELECTION (5) 35

Auto Selection (5-1) *35*
Manual Selection (5-2) *36*

3.6 SECURITY SETTINGS (6) 36

Set Code Status (6-1) *36*
PIN code (6-1-1) 36
Phone Code (6-1-2) 36
Change Password (6-2) *37*
PIN Code (6-2-1) 37
PIN2 (6-2-2) 37
Phone Code (6-2-3) 37
Network Password (6-2-4) 37
Fixed Dial (6-3) *38*
View (6-3-1) 38
Set Status (6-3-2) 38
Modify (6-3-3) 38
SIM Lock (6-4) *38*
Set Status (6-4-1) 39
Change Code (6-4-2) 39

3.7 AUDIO SETTINGS (7) 39

Ring Volume (7-1) 39
Ring Type (7-2) 39
Keypad Tone (7-3) 39
Alarm Type (7-4) 40

3.8 CLOCK & CALENDAR (8) 40

Set Alarm (8-1) *40*
Set Time (8-2) *40*
Calendar (8-3) *40*
View Day 41

Downloaded from www.Manualslib.com manuals search engine

Make Note..... 41
Erase Notes..... 41
View All 41
Select Date 41
Date Mode 41

3.9 SIM (9).....42

CHAPTER 4. MENU STRUCTURE MAP.....43

CHAPTER 5. CARE AND MAINTENANCE.....45

CHAPTER 6. ACCESSORIES.....47

6.1 BATTERIES 47

Battery Charger..... *47*

6.2 HANDS-FREE 51

Portable Hands-Free *51*
Simple Car Kit *51*
Car Holder *51*

CHAPTER 7. TROUBLESHOOTING 53

Downloaded from www.Manualslib.com manuals search engine

< Memo>

Downloaded from www.Manualslib.com manuals search engine

Safety Information

On the Road...

- Follow regulations in force concerning the use of cellular phone in the place you are driving.
- Use hands-free operation while driving a vehicle.
- Park your car before conversing.

In the Air...

- Using cellular phones in an aircraft may cause interference to the radar system which is illegal.
- Switch off your cellular phone before you board on an aircraft.

Dangerous Areas...

Turn off your phone when you are near the following places:

- Refueling station
- Fuel depots
- Chemical plants
- Blasting operation area

And These Electronic Devices...

Your cellular phone may cause interference or malfunction of electronic equipment that is not adequately shielded from radio frequency energy. Beware of interference which usage of your phone may cause to the following devices:

- Medical devices, e.g. pacemakers, hearing aids
- Electronic fuel injection systems
- Electronic anti-lock braking systems
- Electronic cruise control systems
- Other electronic systems (Consult the dealer of your electronic devices for possible influences)
- The electromagnetic emission of wireless telecommunication may result in negative effect to human health

	Failure to follow these instructions may lead to suspension or denial of cellular phone services to the offender or legal action or both.

Downloaded from www.Manualslib.com manuals search engine

Your Handset

Introduction

Thank you for choosing the Acer G7 Series mobile phone.

From now on, with your Acer G7 Series mobile phone, you will experience the total mobility of your life. You will be able to communicate with more freedom and convenience - you can not only make and receive phone calls with your handset alone, but also communicate silently by connecting to a laptop or desktop PC to transmit data, fax and access Internet*.

We know that you demand more than what a mobile phone can offer for mobility. The advanced EFR (Enhanced-Full-Rate) sound technology optimizes the sound quality of your phone calls, allowing you to clearly distinguish the speaker's tone. If you are surprised at what you hear, you will be even surprised at what you see – the electroluminescent LCD display frees you from the nightmare of groping between pixels. You will see clearly each and every character displayed on the screen.

Why not take your phone as a personal secretary? With the built-in calendar function, you can jot down important notes on different dates and remind you with alarm when it's time to go. If you prefer a silent reminder, the built-in vibrator ringer can certainly save you from embarrassment in a meeting.

There are more to discover. Now please follow us and make acquaintance with your new and versatile partner.

*Data Service Kit is required to use the data service function.

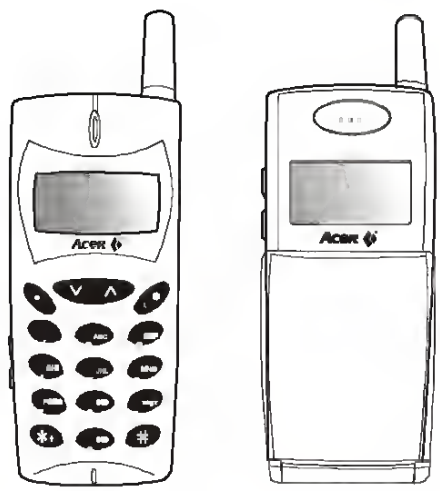

Downloaded from www.Manualslib.com manuals search engine

Front View

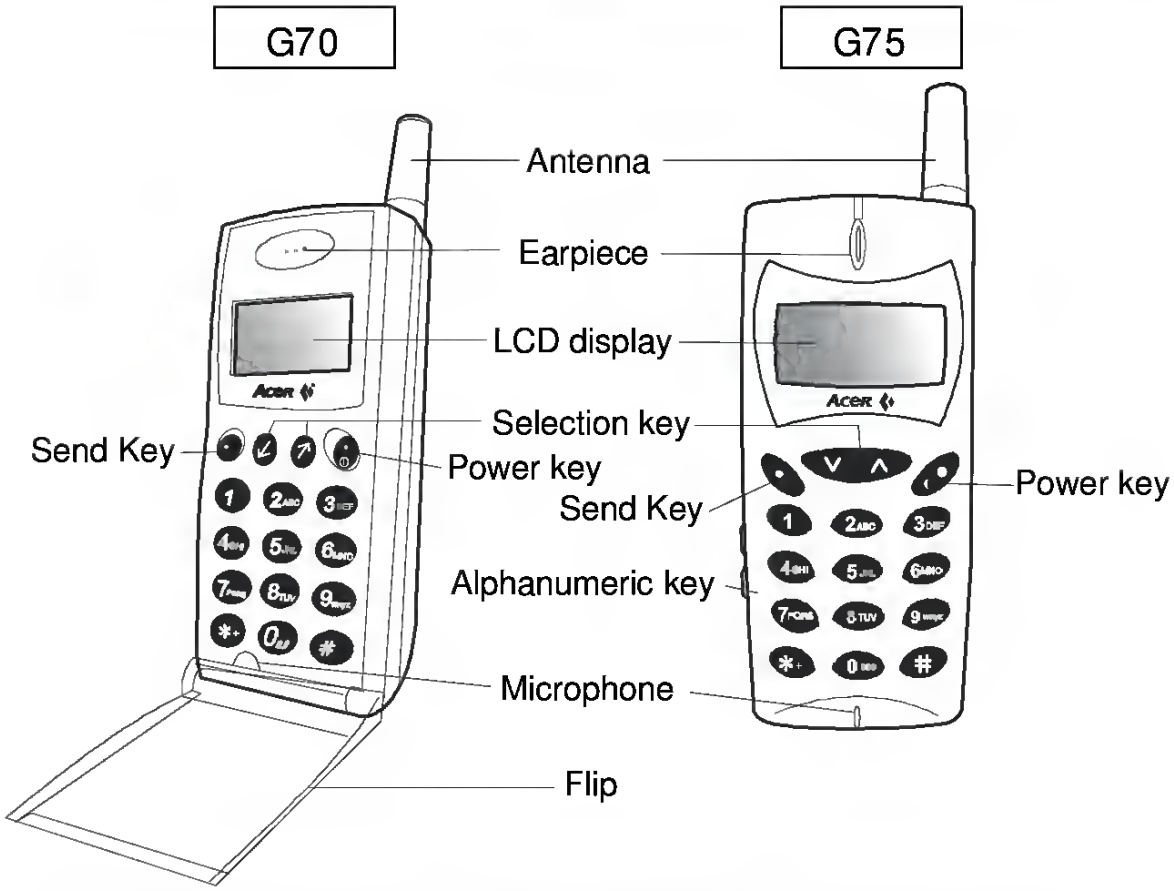

* For detailed description on the function of each key, please refer to page 6.

Side View

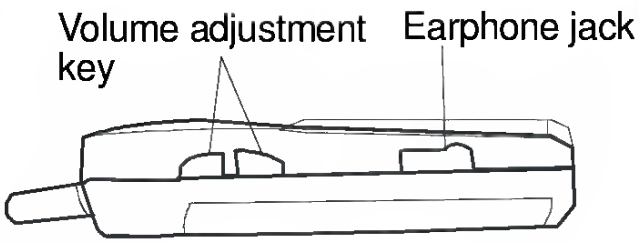

* Under standby mode, you can press the volume adjustment key to access the Phone Book directly.
* You can connect the optional hands-free to the earphone jack.

Downloaded from www.Manualslib.com manuals search engine

Bottom View

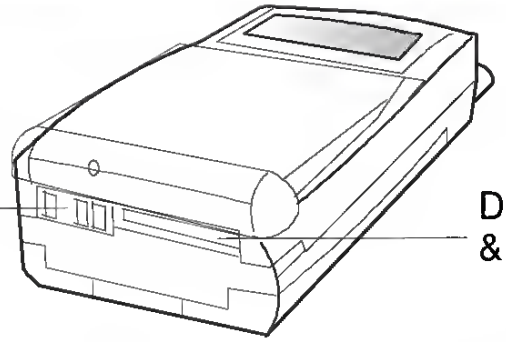

*The data transmission & car kit connector can be used to connect the data service cable and the optional hands-free.

Rear View

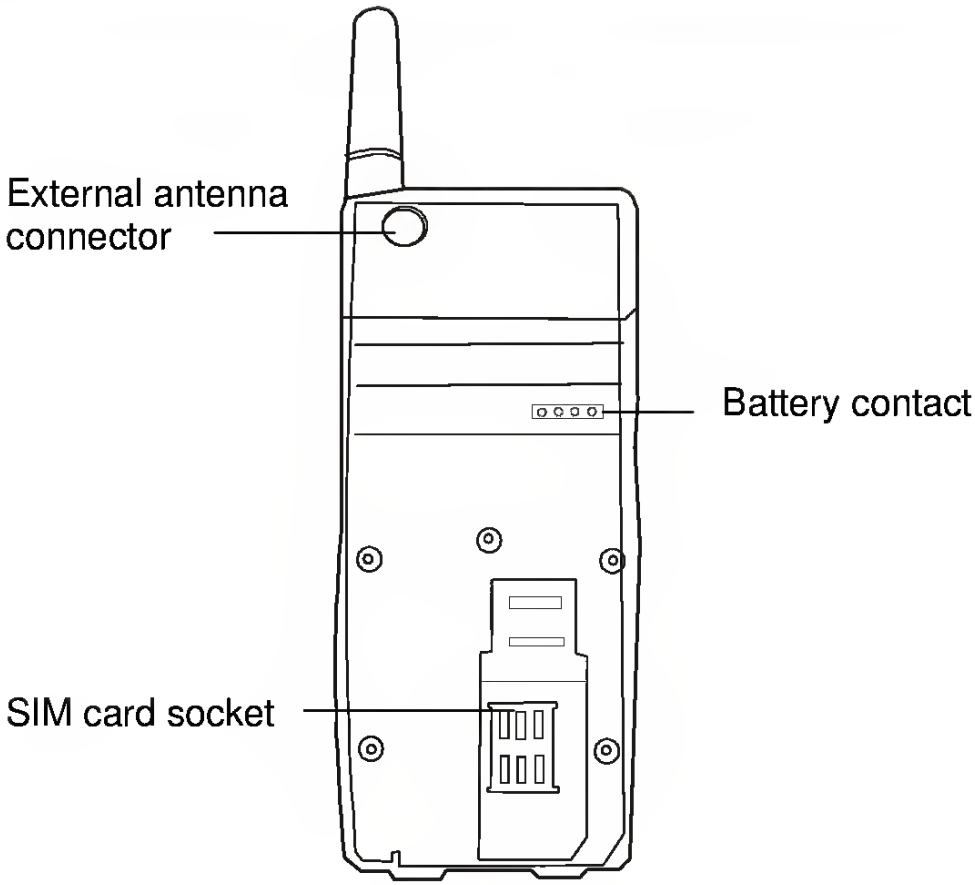

Downloaded from www.Manualslib.com manuals search engine

The LCD Display

There are several icons often shown on the LCD display:

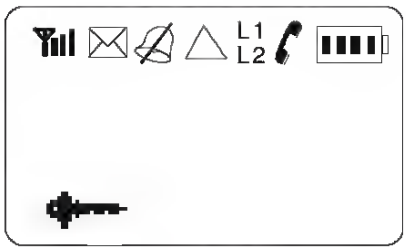

The table below describes the meaning of each icon:

	Signal Strength	The more bars displayed, the better the signal strength.
	Roaming	When your phone is not used under your home network, this icon will appear.
	Short Message	This icon will show on the screen when short message is received by the phone. When the message storage memory is full, this icon will flash.
	Speaking	This icon appears when you speak with your phone.
L1 L2	Line in use	Display the current line in use (Please refer to page 33).
	Vibrator	This icon will appear when vibrator ringer mode is on.
	Battery Status	It shows four levels of strength of the battery. The more the bars, the more the strength. When charging the battery, you can see the strength of battery on the screen and the bars flash until the battery is full.
	Key Lock	This icon indicates that the key lock mode is ON.
	Data Call	This icon will appear if you set the next call as data call (Please see page 33 for details).
	Fax Call	This icon will appear if you set the next call as fax call (Please see page 33 for details).

Downloaded from www.Manualslib.com manuals search engine

Keys

The keys on your handset can be divided into two categories: Function keys and Alphanumeric keys.
In standby mode, when you press a key on the keypad, the electroluminescent back light will be turned on automatically. If you want to turn off the back light, please refer to page 34 for details.

Function keys

There are 3 function keys on the keypad:

G70	G75	
		Power On/ Off Key Long press this key to turn the handset power on or off. When used to access the menu functions, you can use this key to return to an upper layer of the menu.
		Send Key Press this key to send your dial or confirm menu selections.
		Selection Key This key is used to navigate and select among function items in the menu or submenu. For example, to access the Phone Book, you can press the key downward to enter the Phone Book item.

Downloaded from www.Manualslib.com manuals search engine

Alphanumeric Keys

There are a total of 12 alphanumeric keys on the keypad. You can use these keys to key in numbers and alphabets. If you type a letter wrong, you can move the cursor to the letter by pressing ↙ (or ∨ ∧) key to erase. You can long press the key to display a capital letter. When you have entered a letter and want to enter the next one, you can wait for about two seconds until the cursor moves to the position of the next letter, or simply press a key immediately to enter.

The table below is a list of the alphanumeric keys and their correspondent characters:

Key	Characters
1	, . : 1 % ! ? ; " ' < > ( ) @ &
2ABC	A B C 2 Å Ä å ä à Ç æ ß
3DEF	D E F 3 è é É £ Æ $
4GHI	G H I 4 ï î ¿
5JKL	J K L 5 Δ _ Φ Γ Λ Ω
6MNO	M N O 6 Ñ ñ ò Ö ö Ø ö
7PQRS	P Q R S 7 ¥ §
8TUV	T U V 8 ü Ü ù
9WXYZ	W X Y Z 9 Π Ψ Σ Θ Ξ 1)
0	_ 0
*+	+ - * / =
#	#

For example, if you want to enter "Mary":

1. Long press 6MNO key until "M" displays on the screen.
2. Long press 2ABC key, then press 2ABC key several times until "a" appears on the screen.
3. Long press 7PQRS key, then press 7PQRS key several times until "a" appears on the screen.
4. Long press 9WXYZ key, then press 9WXYZ key several times until "a" appears on the screen. Finally press ⊙ (or ●) key to confirm.

Downloaded from www.Manualslib.com manuals search engine

< Memo>

Downloaded from www.Manualslib.com manuals search engine

Chapter 1. Basic Operation

1.1 Turn On the Phone Power

Long press (or) key for a few seconds to turn on the phone power and enter standby mode.

1.2 Turn Off the Phone Power

Long press (or) key for a few seconds to turn off the phone power.

1.3 Make a Call

❶ Long press (or) key for a few seconds to switch your phone on.

❷ Enter your PIN and press (or) key.
After the PIN is accepted, your phone will start searching the designated network automatically.
After connecting to the network successfully, LCD display will show which network you connect to and go into standby mode.
In this stand-by mode, dial the phone number including the area code you desire. Then, press (or) key to send out your call.

When the network service is not available, the following sign "No Service" will pop up on the screen.

When connected to the network other than your designated one, "Limit Service" will appear on the screen. You can only make emergency call.

During a call, you can use the in call functions as described in page 13.

1.4 End a Call

Press (or) key to end or cancel a call.

Downloaded from www.Manualslib.com manuals search engine

1.5 Answer a Call

When the phone rings or vibrates, the screen will display the name and the number of the caller (If your network service provider supports such function). The name displayed depends on the data in the Phone Book.

Press ⊙ (or ⊙) key to answer a call. There are three answer mode options for you to answer your calls. Please refer to page 34 for details.

1.6 Adjust the Earpiece Volume

Press the buttons on the side of the phone to adjust the volume of the earpiece. Five levels of volume are available for your selection.

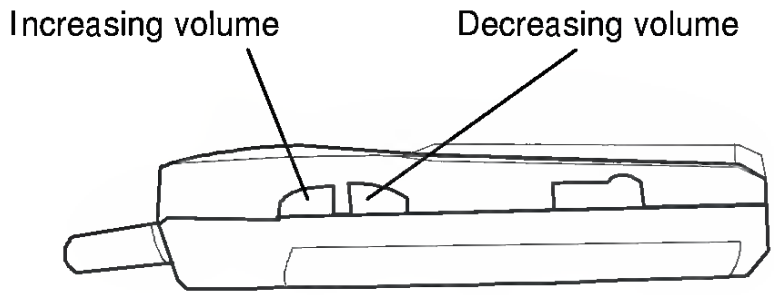

Downloaded from www.Manualslib.com manuals search engine

Chapter 2. Basic Call Functions

2.1 One-Touch Dialing

There are two ways for you to do one-touch dialing while in stand-by mode:

- You can long press ⊙ (or) key. The last number you dialed will be sent out directly.
- You can use the first 9 record saved in the phone book by pressing the location of the desired number. For instance, if the storage location is 5, press 5 key to initiate the call. The name and number will appear on the screen when sending out the call. For details, please refer to Phone Book on page 17.

2.2 Make an International Call

- Enter the outgoing national code, or press *+ key for about 1 second until "+ " shows up on the display.
- Enter the national code, area code and phone number of that call. Send out your call by pressing ⊙ (or) key. When dialing, please omit the first zero of receiver's area code.

2.3 Make an Emergency Call

Enter 112 (the international emergency number) and press ⊙ (or) key. The call will be sent out. This 112 number can be used in any country despite if a SIM card is available, as long as you are included in a GSM network.

2.4 Make a Voice Mail Call

Long press 0 and you will link to your voice mail center directly. For details, please refer to page 24.

Downloaded from www.Manualslib.com manuals search engine

2.5 Missed Call Message

If for any reason, incoming calls can not be answered, a missed call message will appear on the screen to remind you of the calls you missed. To reply to the missed call, first press ⊙ (or ◡) key to confirm, then press ↙↗ (or ∨ ∧) key to select the number you want to reply to and press ⊙ (or ◡) key to dial.

2.6 Abbreviated Call

Key in a number (1 to 99) which locates the desired phone number in the memory, then press # key. When the desired phone number appears, press ⊙ (or ◡) key to dial.

2.7 Phone Book Shortcut

Under standby mode, you can press the volume adjustment key to enter phone book and browse the entries. You can press ↙↗ (or ∨ ∧) key to select and press ⊙ (or ◡) key to dial.

2.8 Add New Entries

Under standby mode, you can add new entries to phone book by first entering the number and long pressing ⊙ (or ◡) key. You will then be prompted to enter the name, number and record number (i.e., the location of that entry). When finished, press ⊙ (or ◡) key.

2.9 Last 10 Number Redial

- Press ⊙ (or ◡) key to access the last number dialed.
- Press ↙↗ (or ∨ ∧) key to scroll through the last 10 numbers dialed.
- Press ⊙ (or ◡) key to send the call if the number shown is correct.

	You can long press ⊙ (or ◡) key to send out the last number dialed directly.

Downloaded from www.Manualslib.com manuals search engine

2.10 Incoming Call Waiting

An incoming call number and call-waiting message will appear on the screen when a new incoming call arrives yet while you are on a call.

- Press 0 and ⊙ (or ◉) key to reject the waiting call.
- Press 1 and ⊙ (or ◉) key to end the active call and connect the waiting call.
- Press 2ABC and ⊙ (or ◉) key to hold on the active call and connect to the waiting call.

With the above operation, you can also switch between an active call and a held call.

2.11 Extension Dial

After you key in the telephone number, long press # key for a second, then "P" will display on the LCD screen. Enter the extension number and press ⊙ (or ◉) key to send the dial.

2.12 Call Options

When you are on a telephone call, you can press ⊙ (or ◉) key to enter the options and press ↙↗ (or ∨ ∧) key to select. The options are listed as follows:

The options marked "*" are only available if you have subscribed to your network service provider.

Mute call

When no sound wants to be heard by your interlocutor when you are on a call. You can choose the Mute function to do so.

* End call

Under a circumstance of multi-party call, you can end up one of them by selecting this function.

Downloaded from www.Manualslib.com manuals search engine

* Swap call

This function is available when you have both active and held calls. Swap transfers the active call to hold and vice versa, so that you may converse with the other party.

* Hold call

This function allows you to put a currently active call on hold, so that you can initiate a new call.

* Unhold call

Once you end the new call while holding an old call, the old call can be made active again by selecting this function.

* Join call

This function can let you make a conference call.

* Private call

During a conference call, you can use this function to talk privately with one participant.

* Messages

You can read or write messages under this function. Please refer to page 21 for details.

2.13 Key Lock

You can long press (#) key to initiate the key lock function to prevent turning on or off your phone unintentionally. When the key lock function is initiated, the icon will appear on the screen.

To unlock, press ⊙ (or ◉) key and then press (*+) key.

Downloaded from www.Manualslib.com manuals search engine

Chapter 3. Menu Options

Your mobile phone provides many extra options for you to select. The following sections describe the options in the menu and their function respectively. There are two ways to access the menu options:

Normal Access

Press ↙↗ (or ∨ ∧) key to enter "Phone Book" in the menu.

- Select the desired function by pressing ↙↗ (or ∨ ∧) key and then press ⊙ (or ●) key to select and confirm.
- Press ⏻ (or ●) key to return to standby mode.

For example, when you want to change the language setting:

Press ↙↗ (or ∨ ∧) key to enter item 4: "Handset Settings", then press ⊙ (or ●) key to confirm.

- Press ↙↗ (or ∨ ∧) key to enter item 4-5 "Language" and press ⊙ (or ●) key to confirm.
- Select a desired language item with ↙↗ (or ∨ ∧) key, then press ⊙ (or ●) key to confirm.
- Press ⏻ (or ●) key to return to standby mode.

Downloaded from www.Manualslib.com manuals search engine

Shortcut Access

After you enter the menu, key in the function code that appears at the right side of the LCD display. (See the following sections for function codes). With this shortcut, you can reach your desired function instantly.

For example, when you want to change the language setting:

Press (or) key to enter "Phone Book" menu.

- Press 4 (go to "Handset Settings").
- Press 5 (go to "Language").
- Select the desired language item with (or) key and press (or) key to confirm.
- Press (or) key to return to standby mode.

You will see the function codes listed behind each function item in the following sections. Type the function code to enter the function through shortcut access.

Downloaded from www.Manualslib.com manuals search engine

3.1 Phone Book (1)

Phone Book menu allows you to set up your own phone book. You can add or delete the records anytime you want. In addition, you are able to choose to save the records either in SIM card memory or phone memory. You can also search the last umber you dialed, the last number you received, and the last number you missed through this Phone Book function.
The following is the structure and details of this directory.

Last Number (1-1)

You can find the record for the latest call you made in various situations.

***Last Dialed** (1-1-1)*
Display the last 10 calls you dialed.
After you press ⊙ (or ◔) key to enter this item, you can press ↙↗ (or ∨ ∧) key to browse the number you dialed. Select a number and press ⊙ (or ◔) key to enter, then press ↙↗ (or ∨ ∧) key to choose to dial that number (Send), save that number to Phone Book (Save) or see the detail of that call (Details). Finally, press ⊙ (or ◔) key to confirm.

***Last Received** (1-1-2)*
Displays the last 10 calls you received.
After you press ⊙ (or ◔) key to enter this item, you can press ↙↗ (or ∨ ∧) key to browse the calls you received. Select a call and press ⊙ (or ◔) key to enter, then press ↙↗ (or ∨ ∧) key to choose to dial that number (Send), save that number to Phone Book (Save) or see the detail of that call (Details). Finally, press ⊙ (or ◔) key to confirm.

***Last Missed** (1-1-3)*
Displays the last 10 missed calls.
After you press ⊙ (or ◔) key to enter this item, you can press ↙↗ (or ∨ ∧) key to browse the calls you missed. Select a call and press ⊙ (or ◔) key to enter, then press ↙↗ (or ∨ ∧) key to choose to dial that number (Send), save that number to Phone Book (Save) or

Downloaded from www.Manualslib.com manuals search engine

see the detail of that call (Details). Finally, press ⊙ (or) key to confirm.

Delete all (1-1-4)

This function allows you to clear the data in the record.

- *Last Dialed (1-1-4-1)*
  Delete the record for last dialed calls.
  After you press press ⊙ (or) key to enter this item, "Delete All" will display on the screen. Press ⊙ (or) key to delete the record. You can also press (or) key to cancel.

- *Last Received (1-1-4-2)*
  Delete the record for last received calls.
  After you press press ⊙ (or) key to enter this item, "Delete All" will display on the screen. Press ⊙ (or) key to delete the record. You can also press (or) key to cancel.

- *Last Missed (1-1-4-3)*
  Delete the record for last received calls.
  After you press press ⊙ (or) key to enter this item, "Delete All" will display on the screen. Press ⊙ (or) key to delete the record. You can also press (or) key to cancel.

- *All (1-1-4-4)*
  Delete all call data.
  After you press press ⊙ (or) key to enter this item, "Delete All" will display on the screen. Press ⊙ (or) key to delete the record. You can also press (or) key to cancel.

Downloaded from www.Manualslib.com manuals search engine

Find Record (1-2)

By Name (1-2-1)

You can search the saved record by entering the name of the receiver. You can also choose to dial, edit, delete or save that number in another location.

After entering this item, you will be prompted to enter the name of the receiver. You can key in the name with the alphanumeric keys then press ⊙ (or ⊙) key. When completed, the corresponding location, telephone number and name will appear on the screen. Now you can press ⊙ (or ⊙) key to choose from the options below:

Send: press ⊙ (or ⊙) key to dial that number.

Edit: press ⊙ (or ⊙) key to edit that record.

Delete: press ⊙ (or ⊙) key to delete that record.

Move: press ⊙ (or ⊙) key to move that record to another location.

Add Record (1-3)

This function allows you to add new record to the Phone Book.

After selecting this function, you will be prompted to enter the name. Enter the name and press ⊙ (or ⊙) key, then enter the telephone number. If you want to enter an extension number, press (#) key for about one second until "P" appears on the screen, then key in the extension number. When completed, press ⊙ (or ⊙) key, your handset will assign a location to save this record automatically. Press ⊙ (or ⊙) key to confirm, and "Record Saved" will appear on the screen. If you want to add more records, please repeat the steps above.

Delete Record (1-4)

You can erase the records which are no longer needed here.

After you enter this item, you can press ⊙ (or ⊙) key to display the options below. You can press ⊙ (or ⊙) key to enter each option:

Downloaded from www.Manualslib.com manuals search engine

Delete By Name (1-4-1)

You can delete the record in the Phone Book by name.

After you enter this item, press ⊙ (or) key, and the screen will ask you to enter the name of the record. After you key in the name of the record you wish to delete, the record will display on the screen. Press ⊙ (or) key, and this record will be erased.

Delete All (1-4-2)

Delete all records in the Phone Book.

After you select this item, press⊙ (or) to clear all records in the Phone Book.

Memory Selection (1-5)

You can select the memory where the phone book records can be saved. Two options are available: the memory in the SIM card or the memory in your handset.

After you enter this item, press ⊙ (or) key. "SIM" and "Phone" will display on the screen. Press ↙↗ (or) key to select a memory to use, then press ⊙ (or) key to confirm.

Own Number (1-6)

Set or display the current SIM card number.
If there is no own number data saved in the memory, the message "No Records. Add Record?" will display on the screen when you enter this function. You can press ⊙ (or) key to enter your name and your SIM card number, then specify a location for this number (1 or 2).
If you have previously entered your own number data in this function, you can press ⊙ (or) key to add, edit or delete the data:

Add Record: press ⊙ (or) key, then enter the name, number and record number. Finally, press ⊙ (or) key to confirm.

Edit Record: press ⊙ (or) key to edit the number. When completed, press ⊙ (or) key.

Delete Record: press ⊙ (or) key to delete.

Downloaded from www.Manualslib.com manuals search engine

3.2 Messages (2)

You have to subscribe to your network service provider before you can use the message functions described below. For details, please consult your network service provider.

Inbox (2-1)

If a new text message is received, icon appears on the screen. Please enter this function to read the new message. If there is no new message, "No New Message" will appear on the screen. After you read the message, you can press ⊙ (or) key to choose from the following:

Delete Message

Delete current message.

Press ⊙ (or) key to delete the message. When deleted, "Deleted, Read Next?" will display on the screen. If you want to read the next message, please press ⊙ (or) key. If you want to exit, please press ⊙ (or) key.

Edit Message

Edit current message.

Press ⊙ (or) key to start editing the message. When completed, you can press ⊙ (or) key to choose from the following options:

Send: press ⊙ (or) key to select this item and send the message to another person. Enter the receiver's phone number and press ⊙ (or) key.

Save: press ⊙ (or) key to save the message. Enter the number and then press ⊙ (or) key.

Reply Message

Reply Current message.

Press ⊙ (or) key to enter this item, then enter the reply message and phone number. When completed, press ⊙ (or) key.

Downloaded from www.Manualslib.com manuals search engine

Send Message

Forward current message.

Press ⊙ (or ◔) key to enter this item and enter the receiver's phone number. When completed, press ⊙ (or ◔) key to confirm.

Use Number

Display and use the number in the message.

After you press ⊙ (or ◔) key to enter this item, the following options will appear on the screen:

Send: press ⊙ (or ◔) key to dial that number.

Save: press ⊙ (or ◔) key, then enter the name for that number. Finally, press ⊙ (or ◔) key to save the number to Phone Book.

Write Message (2-2)

You can write short messages with this function.

After you press ⊙ (or ◔) key to enter this function, key in the message you want to send and press ⊙ (or ◔) key, then choose "Send" or "Save":

Send: press ⊙ (or ◔) key, then enter the receiver's number and press ⊙ (or ◔) to send or press ⓘ (or ◔) key to cancel.

Save: press ⊙ (or ◔) key then enter the receiver's number. Finally, press ⊙ (or ◔) key to save, or press ⓘ (or ◔) key to cancel.

Downloaded from www.Manualslib.com manuals search engine

Outbox (2-3)

You can use this function to read the messages you sent or received.

After you select a message, you can press ⊙ (or ◯) key to choose from the following options:

Delete Message

Delete the selected message.

Press ⊙ (or ◯) key to delete the message. When deleted, "Deleted, Read Next?" will display on the screen. If you want to read the next message, please press ⊙ (or ◯) key. If you want to exit, please press ⊙ (or ◯) key.

Edit Message

Edit the selected message.

Press ⊙ (or ◯) key to start editing the message. When completed, you can press ⊙ (or ◯) key to choose from the following options:

Send: press ⊙ (or ◯) key to select this item and send the message to another person. Enter the receiver's phone number and press ⊙ (or ◯) key.

Save: press ⊙ (or ◯) key to save the message. Enter the number and then press ⊙ (or ◯) key.

Send Message

Send the selected message.

Press ⊙ (or ◯) key to enter this item and enter the receiver's phone number. When completed, press ⊙ (or ◯) key to confirm.

Use Number

Display the number in the selected message.
Display and use the number in the message.

After you press ⊙ (or ◯) key to enter this item, the following options will appear on the screen:

Send: press ⊙ (or ◯) key to dial that number.

Downloaded from www.Manualslib.com manuals search engine

Save: press ⊙ (or ◉) key, then enter the name for that number. Finally, press ⊙ (or ◉) key to save the number to Phone Book.

Listen Message (2-4)

With this function, you can call the voice mailbox provided by your network service provider.

After you press ⊙ (or ◉) key, you can dial the voice mailbox and listen to the voice mail.

Cell Broadcast (2-5)

You can receive cell broadcast offered by your network service provider, and choose preferred topics and languages. You can press ⊙ (or ◉) key to choose from the following options:

Receive Broadcast (2-5-1)

Receive the cell broadcast provided by your network service provider.

After pressing ⊙ (or ◉) key to enter this item, you can press ↙↗ (or ∨ ∧) key to choose "ON" or "OFF" to decide whether to receive or not. Finally, press ⊙ (or ◉) key to confirm.

Topics (2-5-2)

Display the topics of the broadcast message.

After you press ⊙ (or ◉) key to enter this item, you can press ⊙ (or ◉) key to choose to add topic or delete topic. When completed, press ⊙ (or ◉) key to confirm.

Language (2-5-3)

You can choose the language used to display the broadcast message.

After you press ⊙ (or ◉) key to enter this item, the options will display on the screen. Press ↙↗ (or ∨ ∧) key to choose the language you want and press ⊙ (or ◉) key to confirm.

Downloaded from www.Manualslib.com manuals search engine

Message Settings (2-6)

This menu item includes several options to adjust the message settings.

Press ⊙ (or ◉) key and the following options will display on the screen:

Message Center (2-6-1)

This function stores the phone number of the message center for sending your text messages. The message you send is transmitted via this message center to the receiver.

Press ⊙ (or ◉) key and enter the message center number provided by your network service provider. When completed, press ⊙ (or ◉) key to confirm.

Valid Period (2-6-2)

You can set the time that your text messages are stored at the message center while the message center attempts to deliver the message.

Press ⊙ (or ◉) key and use ↙↗ (or ∨ ∧) key to select a desired valid time. Finally, press ⊙ (or ◉) key to confirm.

Voice Mail Box (2-6-3)

Within this submenu, you can store the phone number of your voice mailbox. You can long press 0 or enter 2-4 *Listen Message* to dial.

Press ⊙ (or ◉) key, then enter the voice mailbox number provided by your network service provider. Finally, press ⊙ (or ◉) key to confirm.

Reply Path (2-6-4)

You can request the network to set the route of replied message via your own message center.

Press ⊙ (or ◉) key and then use the ↙↗ (or ∨ ∧) key to select "On" or "Off". Finally, press ⊙ (or ◉) key to confirm.

Downloaded from www.Manualslib.com manuals search engine

Delivery Report (2-6-5)

If you initiate this function, your network will send you a delivery report.

Press ⊙ (or) key and then use the ↙↗ (or ∨ ∧) key to select "On" or "Off". Finally, press ⊙ (or) key to confirm.

Alert Beep (2-6-6)

When receiving a short message, this alert beep function will remind you of this when it is initiated.

Press ⊙ (or) key and then use the ↙↗ (or ∨ ∧) key to select "On" or "Off". Finally, press ⊙ (or) key to confirm.

Message Format (2-6-7)

You can request the network to convert your text message into different formats.

Press ⊙ (or) key and then use the ↙↗ (or ∨ ∧) key to select from the following formats: Paging, E-mail, Fax, Voice, ERMES, Telex and G4 Fax. When completed, press ⊙ (or) key to confirm.

Delete All (2-7)

Delete all the messages. If you just want to delete certain messages, please refer to page 21 and 23 for details.

Press ⊙ (or) key, and "Delete All" will display on the screen. If you want to delete all message data, press ⊙ (or) key. You can also press ⏻ (or) key to cancel.

Downloaded from www.Manualslib.com manuals search engine

3.3 Call Services (3)

Call Divert (3-1)

You can select several call diverting modes here. When you don't need certain divert mode any more, you can cancel it individually.

No Condition (3-1-1)

With this function, you can divert your calls to another designated phone number without any condition.

Press ⊙ (or ⊙) key to display the following options:

Activate: after you press ⊙ (or ⊙) key to enter this function, you will be prompted to enter the number to divert to. When you complete entering the number, press ⊙ (or ⊙) key to activate the function.

Cancel: press ⊙ (or ⊙) key to cancel the function.

Status: press ⊙ (or ⊙) key, and the status of this function will display on the screen.

If Busy (3-1-2)

You send your calls to a designated phone number when your phone is busy.

Press ⊙ (or ⊙) key to display the following options:

Activate: after you press ⊙ (or ⊙) key to enter this function, you will be prompted to enter the number to divert to. When you complete entering the number, press ⊙ (or ⊙) key to activate the function.

Cancel: press ⊙ (or ⊙) key to cancel the function.

Status: press ⊙ (or ⊙) key, and the status of this function will display on the screen.

Downloaded from www.Manualslib.com manuals search engine

If No Reply (3-1-3)

When the incoming call is not replied, your calls will be sent to another phone you assign.

Press ⊙ (or) key to display the following options:

Activate: after you press ⊙ (or) key to enter this function, you will be prompted to enter the number to divert to. When you complete entering the number, press ⊙ (or) key to activate the function.

Cancel: press ⊙ (or) key to cancel the function.

Status: press ⊙ (or) key, and the status of this function will display on the screen.

If Unreachable (3-1-4)

When the network is unavailable, your calls will be sent to another designated number.

Press ⊙ (or) key to display the following options:

Activate: after you press ⊙ (or) key to enter this function, you will be prompted to enter the number to divert to. When you complete entering the number, press ⊙ (or) key to activate the function.

Cancel: press ⊙ (or) key to cancel the function.

Status: press ⊙ (or) key, and the status of this function will display on the screen.

Cancel All (3-1-5)

You can cancel all the diverting function here.

Press ⊙ (or) key, and "Cancel All" will display on the screen. Press ⊙ (or) key again to confirm.

Downloaded from www.Manualslib.com manuals search engine

Call Barring (3-2)

If wishing to bar outgoing or incoming calls, you can use the barring function to set up limitations.

Bar All Out (3-2-1)

Bar all outgoing calls.

Press ⊙ (or ◯) key to display the following options:

Activate: after you press ⊙ (or ◯) key to enter this function, you will be prompted to enter the password provided by your network service provider. When you complete entering the password, press ⊙ (or ◯) key to activate the function.

Cancel: press ⊙ (or ◯) key to cancel the function.

Status: press ⊙ (or ◯) key, and the status of this function will display on the screen.

Bar Int'l Out (3-2-2)

Bar all outgoing international calls.

Activate: after you press ⊙ (or ◯) key to enter this function, you will be prompted to enter the password provided by your network service provider. When you complete entering the password, press ⊙ (or ◯) key to activate the function.

Cancel: press ⊙ (or ◯) key to cancel the function.

Status: press ⊙ (or ◯) key, and the status of this function will display on the screen.

Bar IntExtH Out (3-2-3)

Bar outgoing international calls except calls that connecting to home network.

Activate: after you press ⊙ (or ◯) key to enter this function, you will be prompted to enter the password provided by your network service provider. When you complete entering the password, press ⊙ (or ◯) key to activate the function.

Cancel: press ⊙ (or ◯) key to cancel the function.

Downloaded from www.Manualslib.com manuals search engine

Status: press ⊙ (or ⊙) key, and the status of this function will display on the screen.

Bar All In (3-2-4)

Bar all incoming calls.

Activate: after you press ⊙ (or ⊙) key to enter this function, you will be prompted to enter the password provided by your network service provider. When you complete entering the password, press ⊙ (or ⊙) key to activate the function.

Cancel: press ⊙ (or ⊙) key to cancel the function.

Status: press ⊙ (or ⊙) key, and the status of this function will display on the screen.

Bar Roaming In (3-2-5)

Bar incoming calls when roaming.

Activate: after you press ⊙ (or ⊙) key to enter this function, you will be prompted to enter the password provided by your network service provider. When you complete entering the password, press ⊙ (or ⊙) key to activate the function.

Cancel: press ⊙ (or ⊙) key to cancel the function.

Status: press ⊙ (or ⊙) key, and the status of this function will display on the screen.

Cancel All (3-2-6)

Cancel all barring setting.

Press ⊙ (or ⊙) key to enter this function, then press ⊙ (or ⊙) key again to confirm.

Downloaded from www.Manualslib.com manuals search engine

Call Waiting (3-3)

This function is only available when you have subscribed to your network provider. An incoming call number and a call-waiting message will appear when a new incoming call is directed to your phone when you are on another call. You can activate or cancel this function by checking the statue here.

***Activate** (3-3-1)*
Activate call waiting function.
Press ⊙ (or ⊙) key to activate this function.

***Cancel** (3-3-2)*
Cancel call waiting function.
Press ⊙ (or ⊙) key to cancel this function.

***Status** (3-3-3)*
Inquire the status of call waiting function.
Press ⊙ (or ⊙) key to inquire the status of the call waiting function.

Call Information (3-4)

This function records the information of the call duration and call cost.
Press ⊙ (or ⊙) key to display the following options:

***Last Call** (3-4-1)*

- *Call Duration (3-4-1-1)*

  Press ⊙ (or ⊙) key, and the duration of the last call in hour, minute & second will be displayed on the screen.
- *Call Cost (3-4-1-2)*

  Press ⊙ (or ⊙) key, and the duration of the last call will be displayed on the screen (Network support required).

***All Calls** (3-4-2)*

- *Call Duration (3-4-2-1)*

Downloaded from www.Manualslib.com manuals search engine

Press ⊙ (or ⊘) key, and the duration of all calls will be displayed on the screen.

- *Call Cost (3-4-2-2)*

  Press ⊙ (or ⊘) key, and the cost of all calls will be displayed on the screen (Network support required).

- *Clear Cost (3-4-2-3)*

  Press ⊙ (or ⊘) key to clear the call cost data (PIN 2 is required).

- *Clear Durations (3-4-2-4)*

  Press ⊙ (or ⊘) key to clear the call duration data.

Call Rate (3-4-3)

- *Currency (3-4-3-1)*

  Press ⊙ (or ⊘) key to enter a preferred currency base to calculate the fare of your calls (PIN 2 is required).

- *Charge Unit (3-4-3-2)*

  Press ⊙ (or ⊘) key to enter the unit price to count the fare (PIN 2 is required).

Cost Limit (ON/OFF) (3-4-4)

You can set limits to the total call cost. If the call cost goes over the limit , the handset can't be used to dial a pay call. When this function is activated, the remaining cost will appear on the screen.

Press ⊙ (or ⊘) key, and the following options will display on the screen:

On: press ⊙ (or ⊘) key to activate the cost limit function (PIN2 is required).

Off : press ⊙ (or ⊘) key to cancel this function.

Downloaded from www.Manualslib.com manuals search engine

Line in Use (3-5)

This function allows you to use two different telephone numbers for one single handset. You can designate the number used to make a call and use both of these numbers simultaneously to receive calls without having to use two handsets to do so. This function is only available if your network service provider provides such service.

After you press ⊙ (or ◔) key to enter this item, you can press ↙↗ (or ∨ ∧) key to choose the number (L1 or L2), then press ⊙ (or ◔) key to confirm. The number you selected (L1 or L2) will appear on the screen while in standby mode.

Next Call (3-6)

Your handset can receive voice, data and fax calls. Depending on your network service provider, you may have to select among the voice, data and fax calls under this option before you can receive them correctly. This scenario only applies to one number scheme network service providers (i.e., the voice, data and fax calls are all transmitted via a single telephone number.
Consult your network service provider to decide if you need to do such setting.

Press ⊙ (or ◔) key, and the following options will appear:

Voice

Press ⊙ (or ◔) key to set the next call as voice call (This is the default setting).

Data

Press ⊙ (or ◔) key to set the next call as data call.

Fax

Press ⊙ (or ◔) key to set the next call as data call.

After you receive a data or fax call, you need to change the setting back to "Voice" in order to receive ordinary voice calls.

Downloaded from www.Manualslib.com manuals search engine

3.4 Handset Settings (4)

Back Light (4-1)

You can choose to turn on or off the electroluminescent back light of the handset LCD screen.

Press ⊙ (or ◯) key to enter and press ↙↗ (or ∨ ∧) key to select "On" or "Off". Finally, press ⊙ (or ◯) key to confirm.

Auto Redial (4-2)

There are two ways to redial a call.

Press ⊙ (or ◯) key, and the following options will display on the screen:

Automatic: after you press ⊙ (or ◯) key to select this mode, the handset redials the number continuously.

Prompt: after you press ⊙ (or ◯) key to select this mode, the handset will inquire your confirmation before redialing the phone number

Off: you can press ⊙ (or ◯) key to select this item and cancel all redialing modes.

Answer by (4-3)

Three options are available for you to answer incoming calls.

Press ⊙ (or ◯) key, and the following options will display on the screen:

Auto: after you press ⊙ (or ◯) key to select this mode, the incomong call will be automatically answered after it rings once. This mode is effective only when portable handsfree is connected to the handset.

Any key: after you press ⊙ (or ◯) key to select this mode, the incoming calls can be answered by pressing any key.

Answer key: after you press ⊙ (or ◯) key to select this mode, the calls can be answered by pressing ⊙ (or ◯) key.

Downloaded from www.Manualslib.com manuals search engine

Key Lock (4-4)

You can use keypad-lock function to prevent unwilling key-in actions say when you put your phone in a bag. In locked mode, you can answer calls by pressing ⊙ (or) key. To unlock, press ⊙ (or) key then press * key.

Language (4-5)

You can choose the language used to display the information.

After you press ⊙ (or) key to enter this item, press ↙↗ (or) keyto select the language and press ⊙ (or) key to confirm and select.

Time Alert (4-6)

Your phone will beep once a minute when you make a call after you initiate this function.

Press ⊙ (or) key to enter this function and use ↙↗ (or) key to select "On" or "Off", then press ⊙ (or) key to confirm.

Restore (4-7)

Reset all settings to default setting.

After you enter this function by pressing ⊙ (or) key, you will be prompted to enter the phone code (The default setting for phone code is 1234). Enter the phone code and press ⊙ (or) key. Press ⊙ (or) key again to confirm.

3.5 Network Selection (5)

When turning on your mobile phone, the phone automatically selects the home network for you. You can also do network selection by manual modes.

Auto Selection (5-1)

This mode automatically searches the available services when the phone is turned on.

After you enter this function by pressing ⊙ (or) key, press ⊙ (or) key again to confirm.

Downloaded from www.Manualslib.com manuals search engine

Manual Selection (5-2)

Manual selection shows connectable networks and allows you link to the one you desire.

After you enter this function by pressing ⊙ (or ◔) key, press ⊙ (or ◔) key again to confirm.

3.6 Security Settings (6)

Set Code Status (6-1)

The code status includes:

PIN code (6-1-1)

You can activate/deactivate the PIN code function here.

After you enter this function by pressing ⊙ (or ◔) key, press ⊙ (or ◔) key again and the screen will display two options: "on" and "Off". Use ↙↗ (or ∨ ∧) key to select and press ⊙ (or ◔) key to confirm. When you change the PIN code status, you will be prompted to enter PIN.

Phone Code (6-1-2)

You can activate/deactivate the Phone Code function here.

After you enter this function by pressing ⊙ (or ◔) key, ⊙ (or ◔) key again and the screen will display two options: "on" and "Off". Use ↙↗ (or ∨ ∧) key to select and press ⊙ (or ◔) key to confirm. When changing the Activate/Deactivate status, you have to enter your phone code. (The default phone code is 1234).

Downloaded from www.Manualslib.com manuals search engine

Change Password (6-2)

PIN Code (6-2-1)

You can change your PIN here.

You need to activate PIN function as described in 6-1-1 before changing your PIN. First, enter the original PIN and press ⊙ (or) key. Then enter the new PIN and press ⊙ (or) key. Finally, enter the new PIN again and press ⊙ (or) key to confirm.

PIN2 (6-2-2)

What is PIN2?

PIN2 is a second set of PIN that is mainly used to control limited services such as call cost limitation and fixed dialing numbers.

You can change PIN 2 the same way described in 6-2-1.

Phone Code (6-2-3)

You can change your phone code the same way described in 6-2-1.

Network Password (6-2-4)

You can change net password the same way described in 6-2-1.

Downloaded from www.Manualslib.com manuals search engine

Fixed Dial (6-3)

You can set limitation of the numbers you call out.

	You must have PIN2 before you can use this function.

View (6-3-1)

Under this branch, you can see what Fixed Dial numbers you set.

Press ⊙ (or ◯) key, and the numbers will display on the screen.

Set Status (6-3-2)

Switch on/off about this Fixed Dial function.

After you enter this function by pressing ⊙ (or ◯) key, ↙↗ (or ∨∧) key to select "On" or "Off" and press ⊙ (or ◯) key to confirm.

Modify (6-3-3)

You can add or change records of your fixed-dial numbers.

Press ⊙ (or ◯) key, and the numbers will display on the screen. You can press ⊙ (or ◯) key again to add, edit or delete numbers.

SIM Lock (6-4)

With this function, you can prevent unauthorized usage of the handset with unknown SIM cards.

After you set this function ON, if the SIM card in your handset is not the one used to enable this function, you will be prompted to enter the unlock code when you power on your handset. If the unlock code entered is correct, the handset will recognize the SIM card automatically. The next time you power on your handset with this newly recognized SIM card, you will not be prompted to enter the unlock code again. However, if the unlock code entered is incorrect, the display will show "Insert Correct SIM", and the handset will function as if the SIM card was not inserted. The handset can recognize up to 3 different SIM cards. After you enter this function by pressing ⊙ (or ◯) key, the following options will appear on the screen:

Downloaded from www.Manualslib.com manuals search engine

Set Status (6-4-1)

After you select this item, you can choose from the following options:

On: press ⊙ (or) key to enable the SIM lock function. You need to enter the unlock code first (The default unlock code is 00000000).

Off: press ⊙ (or) key to disable the SIM lock function. You need to enter the unlock code to disable.

Change Code (6-4-2)

Change the unlock code. You need to enter the original unlock code.

After you select this item, press ⊙ (or) key and you will be prompted to enter the original unlock code. Enter the original unlock code and the new unlock code, then press ⊙ (or) key.

3.7 Audio Settings (7)

Ring Volume (7-1)

You can select the ring volume level here. Totally five levels are available.

After you enter this item, press ↙↗ (or) key to change the ring volume level. The more bars appear beside the bell icon, the larger the ring volume. Finally, press ⊙ (or) key to confirm.

Ring Type (7-2)

You can choose the ring type of your phone from 5 ring types, 13 melodies and 2 vibration types.

After you enter this item, press ↙↗ (or) key to choose the ring type to use. Finally, press ⊙ (or) key to confirm.

Keypad Tone (7-3)

You can control the on/off of your keypad tone by using this function.

After you enter this item, press ↙↗ (or) key to choose from "On" or "Off". Finally, press ⊙ (or) key to confirm.

Downloaded from www.Manualslib.com manuals search engine

***Alarm Type** (7-4)*

You can set the alarm type here.

After you enter this item, press ↙↗ (or ∨ ∧) key to choose the ralarm type to use. Finally, press ⊙ (or ⊙) key to confirm.

3.8 Clock & Calendar (8)

This sub-menu allows you to set alarm, current time or jot down notes as a reminder for your important matters.

Set Alarm (8-1)

After entering this function item, you can choose to set alarm function On or Off. If you choose "On", "Set Alarm" will pop up on the screen. You can press ↙↗ (or ∨ ∧) key or press alphanumeric keys directly to set the alarm time, then press ⊙ (or ⊙) key to confirm. If you choose "Off", the alarm function will be disabled.

Set Time (8-2)

You can set current time in this function item. Totally two options are available:

On: you can choose this item to display current time in standby mode and set current time. To set current time, enter year, month day and time, then press ⊙ (or ⊙) key. If you want to clear a number, ↙↗ (or ∨ ∧) key.

Off: neither set nor display current time.

Calendar (8-3)

When you enter this function, current time will be shown on the screen. If you haven't set current time and date yet, please do it in function 8-2--Set Time. You can press ↙↗ (or ∨ ∧) key to select date forward or backward, then press ⊙ (or ⊙) key to enter its options:

Downloaded from www.Manualslib.com manuals search engine

View Day

View the notes for current selected date. After you finish reading the notes, you can press ⊙ (or ⊙) key to enter and edit, erase the note or forward the note to another date.

Make Note

After entering this item, you can first jot down the notes, then ⊙ (or ⊙) to confirm. You will be prompted to enter the date for this note. When finished, "Set Alarm?" will display on the screen. If you want to enable the alarm function to remind you, you can press ⊙ (or ⊙) key to set the alarm time. If you don't need the alarm, press ⊙ (or ⊙) key to save the note.

Erase Notes

You can choose "Erase One By One" and press ↙↗ (or ∨ ∧) key to select and erase notes individually, or choose "Erase All" and when "Erase All Notes?" appears on the screen, press ⊙ (or ⊙) key to erase all notes.

View All

You can press ↙↗ (or ∨ ∧) key to display the notes. When you finished reading the note, you can press ⊙ (or ⊙) key to enter and choose to erase, edit the note or forward the note to another date.

Select Date

You can enter the date of the note you want to read. When done, the screen will display the date you input. Press ⊙ (or ⊙) to display the note of that day.

Date Mode

You can choose from three date display mode options: day/month/year, year/month/day or month/day/year.

Downloaded from www.Manualslib.com manuals search engine

3.9 SIM (9)

This function is provided by your network service provider. Depending on the service provided, there will be several extra options under this directory. However, if your network service provider does not offer such service, this item will not be displayed on the screen.
For more details, please contact your network service provider.

Downloaded from www.Manualslib.com manuals search engine

Chapter 4. Menu Structure Map

Please refer to the Menu Structure Map below to access each function item quickly and easily:

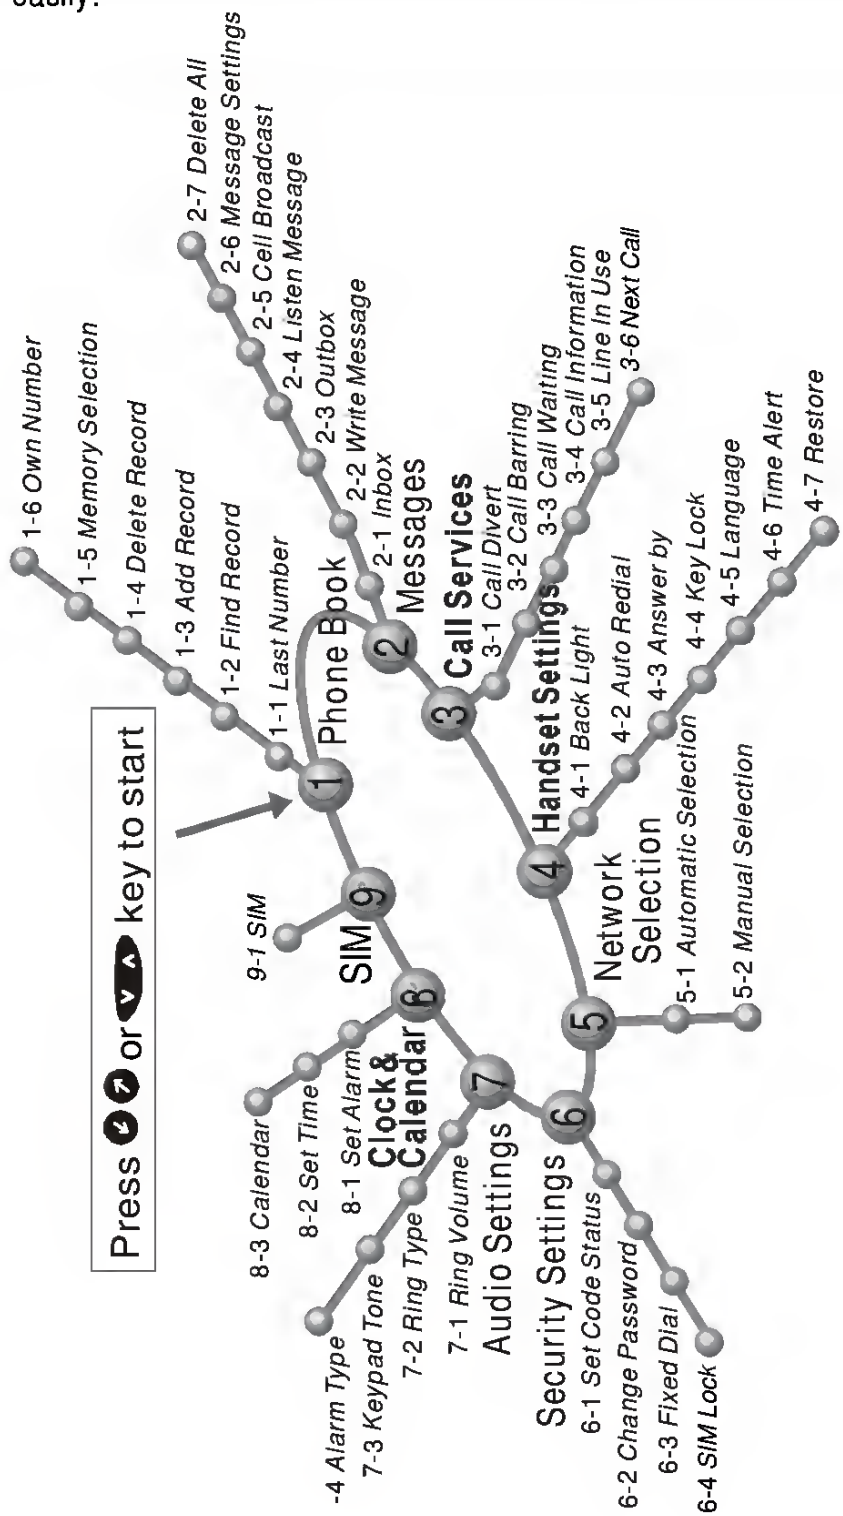

Downloaded from www.Manualslib.com manuals search engine

< Memo>

Downloaded from www.Manualslib.com manuals search engine

Chapter 5. Care and Maintenance

Notice the following to ensure the proper usage and the life of your mobile phone:

- Keep your mobile phone and its accessories out of small children's reach.
- Keep your phone set dry. Use your phone at a normal temperature. Temperature higher than 55°C or lower than -20°C (higher than 131°F or lower than -4°F) may cause damage to your handset.
- Do not use or store your phone in dusty or dirty areas if possible.
- Do not disassemble the phone.
- Do not use harsh detergents to clean the phone.
- If your mobile phone or its accessory is not working properly, contact your dealer immediately.

Downloaded from www.Manualslib.com manuals search engine

< Memo>

Downloaded from www.Manualslib.com manuals search engine

Chapter 6. Accessories

6.1 Batteries

There are several kinds of optional batteries available for your handset: NiMH battery pack 650 mAh and Li-ion battery pack 600/1000 mAh. Batteries with larger capacity can extend the standby time of your handset. For more information on optional batteries, please consult your dealer.

Battery Charger

In addition to the travel charger, you can also choose to use the desktop charger or cigarette lighter charger.

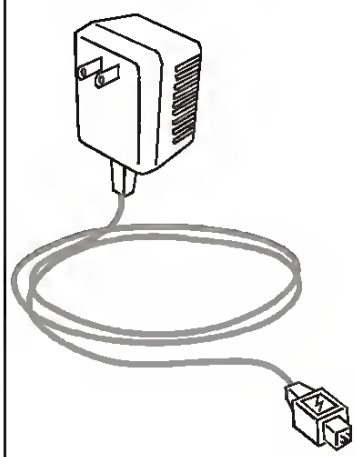

Travel charger
(Included)

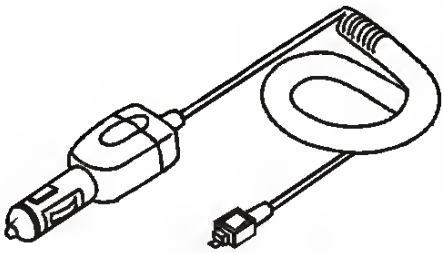

Cigarette lighter charger
(Available separately)

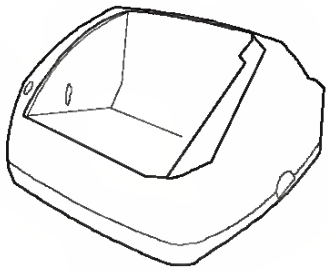

Desktop charger
(Available separately)

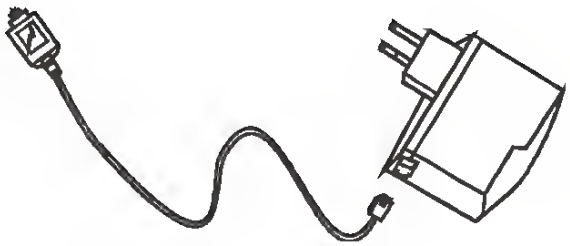

Fast travel charger
(Available separately)

Downloaded from www.Manualslib.com manuals search engine

Using Travel Charger

Plug the charging connector into the battery charging socket and the adapter to a power outlet.

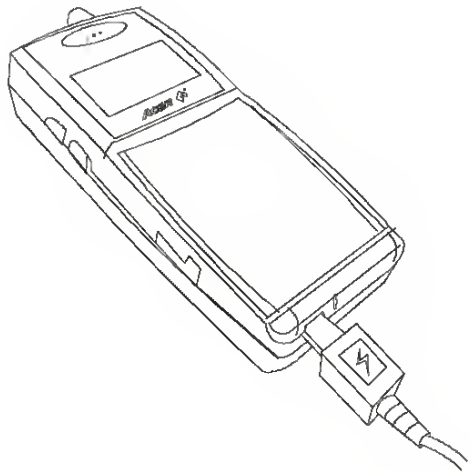

Using Desktop Charger

Connect the travel charger cable to the desktop charger and the power outlet. Put your phone on the desktop charger as shown.

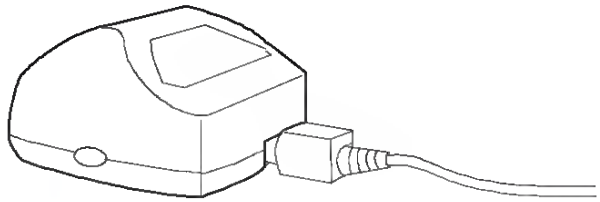

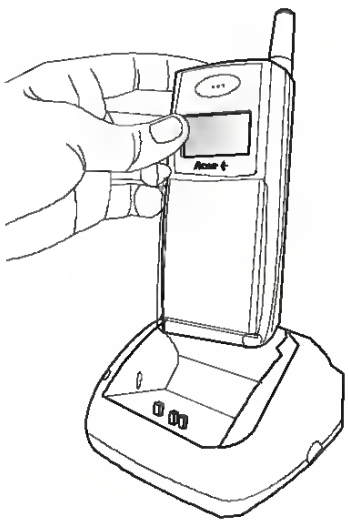

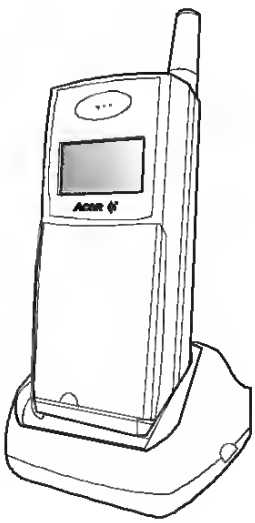

Downloaded from www.Manualslib.com manuals search engine

Charging Battery

You can detach the battery, and locate it on the rear side of the charger as shown.

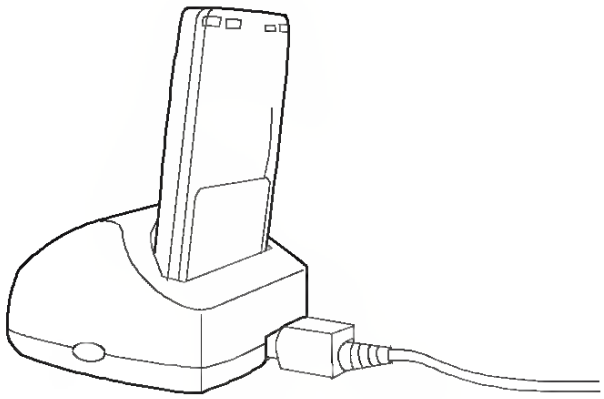

⚠	On the LCD display, the battery strength bars will flash until the battery is full. When you start charging the battery in standby mode, the battery strength bars will start to flash a few seconds after you plug in the phone, indicating that the battery charging has started. Please make sure that the flash mark faces upward when you insert the connector into the battery charging socket. When you detach the cable from the phone, move the connector upward or downward and then pull the connector out of the socket. For safety concerns, when the temperature of the phone goes over 45°C or below 5°C, the battery charging will come to a halt. When the phone temperature return to a normal range, the battery charging will resume.

Cigarette Lighter Charger

You can use the cigarette lighter and in-car battery charger to charge the battery in a car.

Downloaded from www.Manualslib.com manuals search engine

Charging Time

The charging time varies according to the battery and charger you use. Please refer to the following table:

	Standard travel charger	Fast travel charger	Desktop charger (standard)	Desktop charger (fast)
Acer 650 mAh Ni-MH battery	210 minutes	75 minutes	230 minutes	130 minutes
Acer 600 mAh Li-ion battery	160 minutes	95 minutes	270 minutes	135 minutes
Acer1000 mAh Li-ion battery	260 minutes	160 minutes	340 minutes	230 minutes

Downloaded from www.Manualslib.com manuals search engine

6.2 Hands-Free

In order to provide the convenience and safety of using the mobile phone when you drive, the hands-free set is available in different combinations to work with your mobile phone.

Portable Hands-Free

The portable hands-free kit includes a microphone and earphone set. Plug the connector into the socket at the bottom of your phone and the hands-free is ready for use. For details, refer to the instruction included with the portable hands-free set.

Simple Car Kit

The simple car kit includes a speaker and a microphone that can be installed in your car. For details, refer to the instruction included with the simple car kit.

Car Holder

You can also use the car holder (available separately) with your handset to secure your handset in your car.

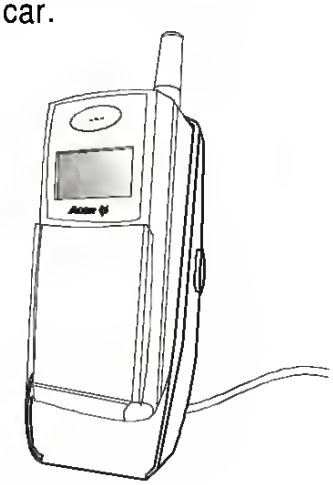

⚠	Use only genuine batteries, battery charger and accessories to ensure the proper function of your phone and battery life. Any malfunction or damage caused by the use of any third-party accessories will result in the void of product warranty. Keep battery terminals or battery charging socket at the bottom of your handset from direct contact with conductive objects. Otherwise it will cause short-circuit and result in danger.

Downloaded from www.Manualslib.com manuals search engine

< Memo>

Downloaded from www.Manualslib.com manuals search engine

Chapter 7. Troubleshooting

When you encounter problems while using your mobile phone, please refer to the following table to solve the problem. If problem persists, please contact your dealer immediately for service.

Problems	Possible cause	How to solve the problem
Poor signal reception	1. You are using your mobile phone in a location (e.g. in the basement or building) where signal is weak.	Move to a location where signal can be received properly.
	2. You are using your mobile phone in a call-crammed time (e.g. the rush hour).	Avoid using your mobile phone in such time.
	3. You are too far from the base station of your network service provider.	You can ask your network service provider for a service range map.
Echo or noise	1. Due to the quality of the network trunk of your network service provider. 2. Poor local telephone line quality.	Hang up the phone and then dial again. You can be switched to a better-quality network trunk or line.
The standby time becomes short	1. The standby time can depend on the system settings of your network service provider.	If you are in a location where the signal is weak, turn off your phone temporarily.
	2. The battery life is over.	Use a new battery.
	3. If the phone can not get connected to a network, it will continue searching for the signal from the base station, which consumes battery capacity.	Change your location or turn off your phone temporarily.
Unable to power on	The battery is used up.	Check the battery capacity.
SIM card error	1. SIM card is out of order.	Send it to your network service provider for check.
	2. SIM card is not installed properly.	Install SIM card correctly.
	3. SIM card contact is contaminated.	Clean the SIM card contact.

Downloaded from www.Manualslib.com manuals search engine

Unable to connect to the network	1. SIM card is invalid.	Contact your network service provider.
	2. You are away from the GSM service area.	Check the service area with your network service provider.
	3. Poor signal.	Move your location to another place where signal can be received properly.
Unable to send message	Your network service provider doesn't support such service.	Contact your network service provider.
Unable to make a call	You have enabled fixed dial function.	Cancel fixed dial function.
Wrong PIN	You have entered the wrong PIN three times.	Contact your network service provider.
Unable to charge the battery	1. The battery or charger is out of order.	Contact your dealer.
	2. The phone temperature goes under 5°C or above 40°C.	Change the battery charging environment.
	3. Poor connection.	Check if all connectors are connected properly.
Unable to input data into the phone book	The phone book memory is full.	Delete some data from the phone book.
Unable to choose certain function	Your network service provider doesn't support such function.	Contact your network service provider.

Downloaded from www.Manualslib.com manuals search engine

Cut along the dotted line

Abbreviated Call
Long press "1"(~9) to dial the number stored in location "1"(~9).

Redial
Long press "Send" key.

Redial the last 10 numbers
Press "Send" key and choose the number you want with selection key, then press "Send" key to dial.

Phone book shortcut
Press the phone book number and then press "#".

Make international call
Long press "*" until "+" appears on the screen, then key in the national code, area code and telephone number.

Manual network selection
Press the selection key to enter "Network Selection" and choose "Manual Selection". The screen will display all available network connections. Press "Send" key to select.

Set phone code
Press the selection key to enter "Security Settings", then choose "Phone Code".

Adjust earpiece volume
Press the volume adjustment keys during a call.

Adjust ring volume
Press the selection key to enter "Audio Settings" and choose "Ring Volume".

Select ring tone
Press the selection key to enter "Audio Settings" and choose "Ring Type".

Voice mail box shortcut
Long press "0" key.

Mute
While talking, press "Send" ke to enter the menu and choose "Mute".

Incoming call waiting
Press "0" and "Send" key to reject the call.
Press "1" and "Send" key to e current call and connect to th waiting call.
Press "2" and "Send" key to hold current call and connect the waiting call.

Hold call
Press "0" and "Send" key end the call on hold.
Press "1" and "Send" key to e current call and connect to th call on hold.
Press "2" and "Send" key to hold current call and connect the call on hold.

Key lock
Long press "#" key to activate the key lock function. To answ calls, press "Send" key. To unlock, Press "Send" key, the press "Send" key again and finally press "*" key.

Read messages
Press "Send" key, when the message receive time and source displays on the screer press "Send" key again.

Delete messages
Press selection key to enter "Messages" function and ther choose "Read Messages". Pu "Send" key thrice and "Delete Messages" will display on the screen.

Downloaded from www.Manualslib.com manuals search engine

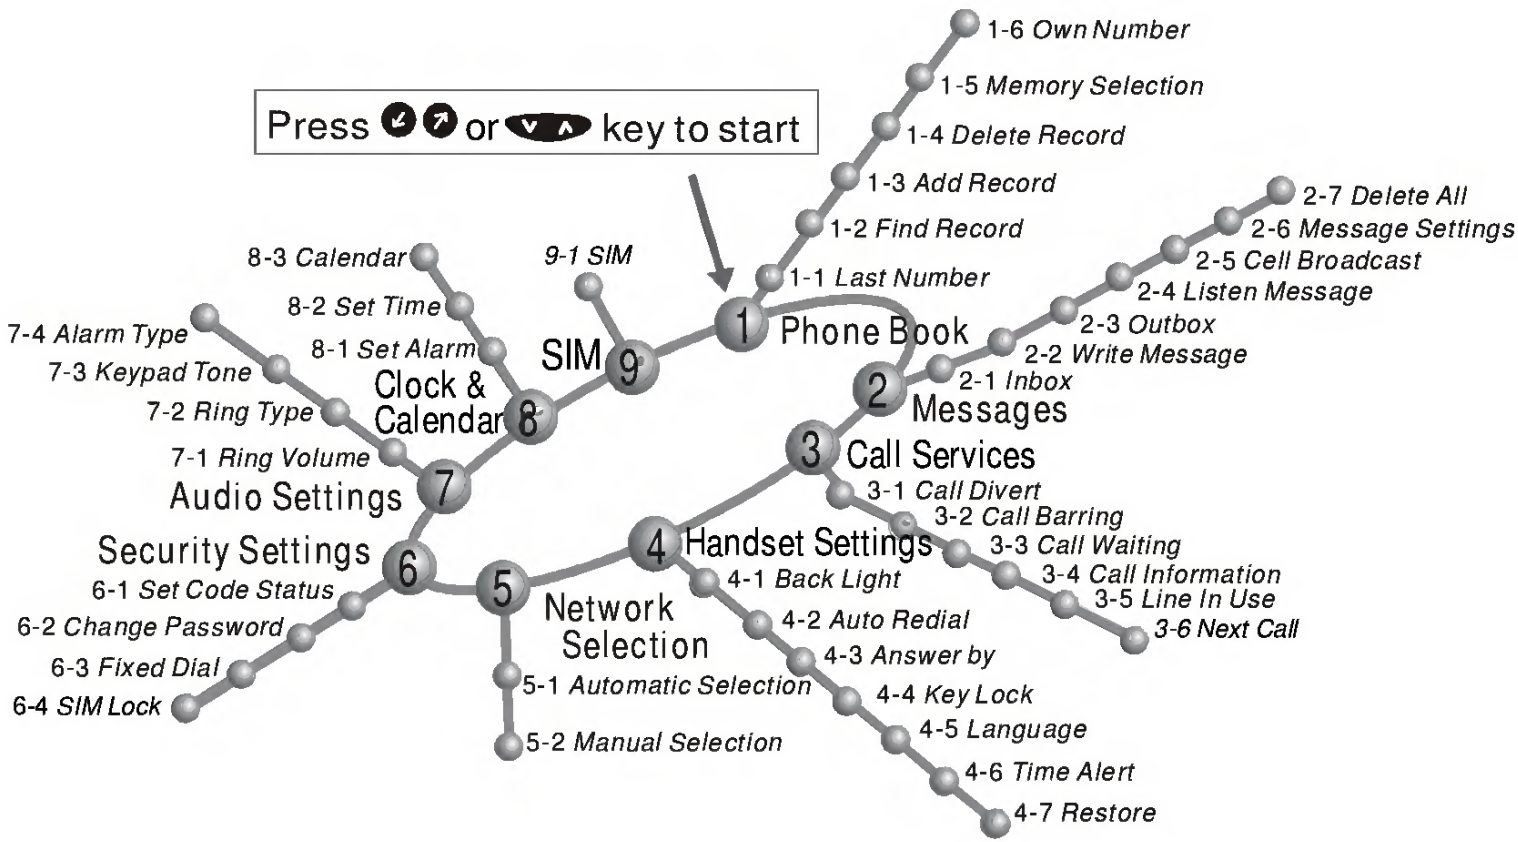

Downloaded from www.Manualslib.com manuals search engine